# COOKTOP PARTS

**For Model: GLP85800, GLP85200, GLP85900**
**(White) (Biscuit) (Black)**

30" ELECTRIC RANGE
CERAN COOKTOP

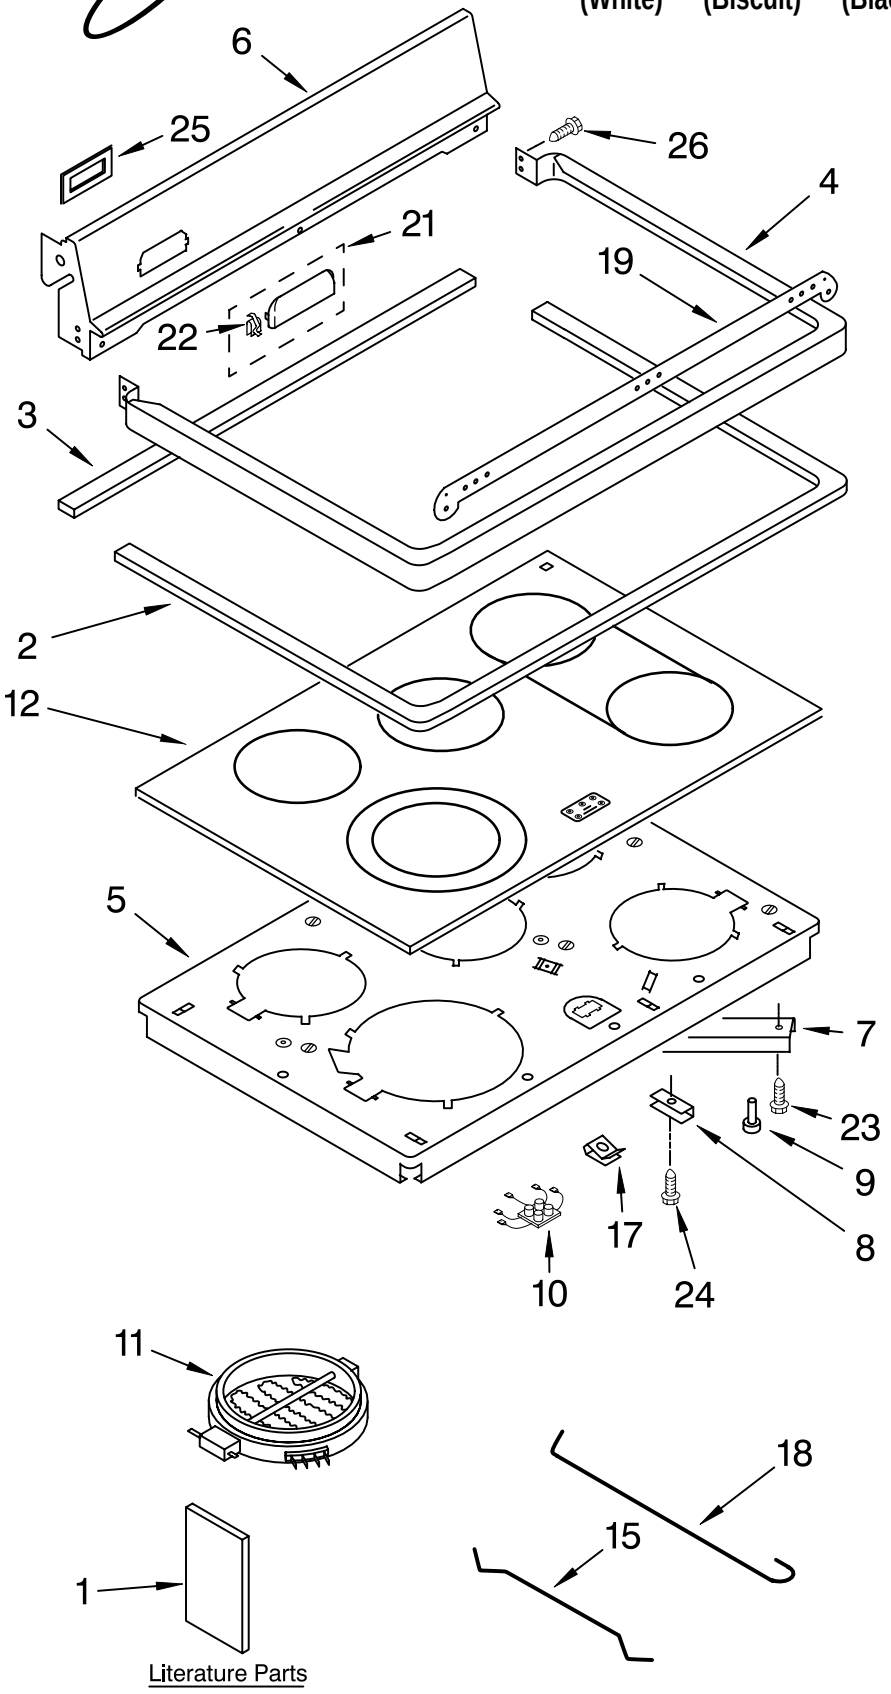


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Literature Parts |
| | LIT9752777 | Installation Instructions |
| | LIT9782474 | Use & Care Guide |
| | LIT9782238 | Wiring Diagram |
| | LIT9752776 | Template, Anti−Tip |
| | LIT9782477 | Service Instr. |
| 2 | 9780939 | Gasket, Cooktop Front & Sides |
| 3 | 9781614 | Rear Gasket |
| 4 | | Frame, Cooktop |
| | 9750456PW | White |
| | 9750456PC | Biscuit |
| | 9750456PB | Black |
| 5 | 9753941 | Support, Element |
| 6 | | Back Splash |
| | 9752337GW | White |
| | 9752337GC | Biscuit |
| | 9752337GB | Black |
| 7 | 9753675 | Brace, Support |
| 8 | 9753691 | Support Clips (4) |
| 9 | 9750969 | Bumper−White (4) |
| 10 | 9781935 | Hot Light |
| 11 | | Element, Surface |
| | 8523697 | 1500W − LR |
| | 8523693 | 1000/2400W − LF |
| | 9753999 | Bridge Element |
| | 9754274 | Warm Zone |
| 12 | | Cooktop, Ceran |
| | 9754255CW | White |
| | 9754255CC | Biscuit |
| 15 | 9781460 | Rod, Small Ceran Element |
| 17 | 9781235 | Speed Nut |
| 18 | 9781459 | Rod, Large Ceran Element |
| 19 | 9780585 | Wire Guard |
| 21 | | Cover Vent |
| | 9753040CW | White |
| | 9753040CC | Biscuit |
| | 9753040CB | Black |
| 22 | 3149190 | Clip, Mounting |
| 23 | 9780272 | Screw |
| | 9752405FW | White |
| 24 | 423248 | Screw |
| 25 | 9750767 | Gasket |
| 26 | 3149333 | Screw |
| | 9753677 | Spring, Warm Zone |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

**For Model: GLP85800, GLP85200, GLP85900**

**(White) (Biscuit) (Black)**

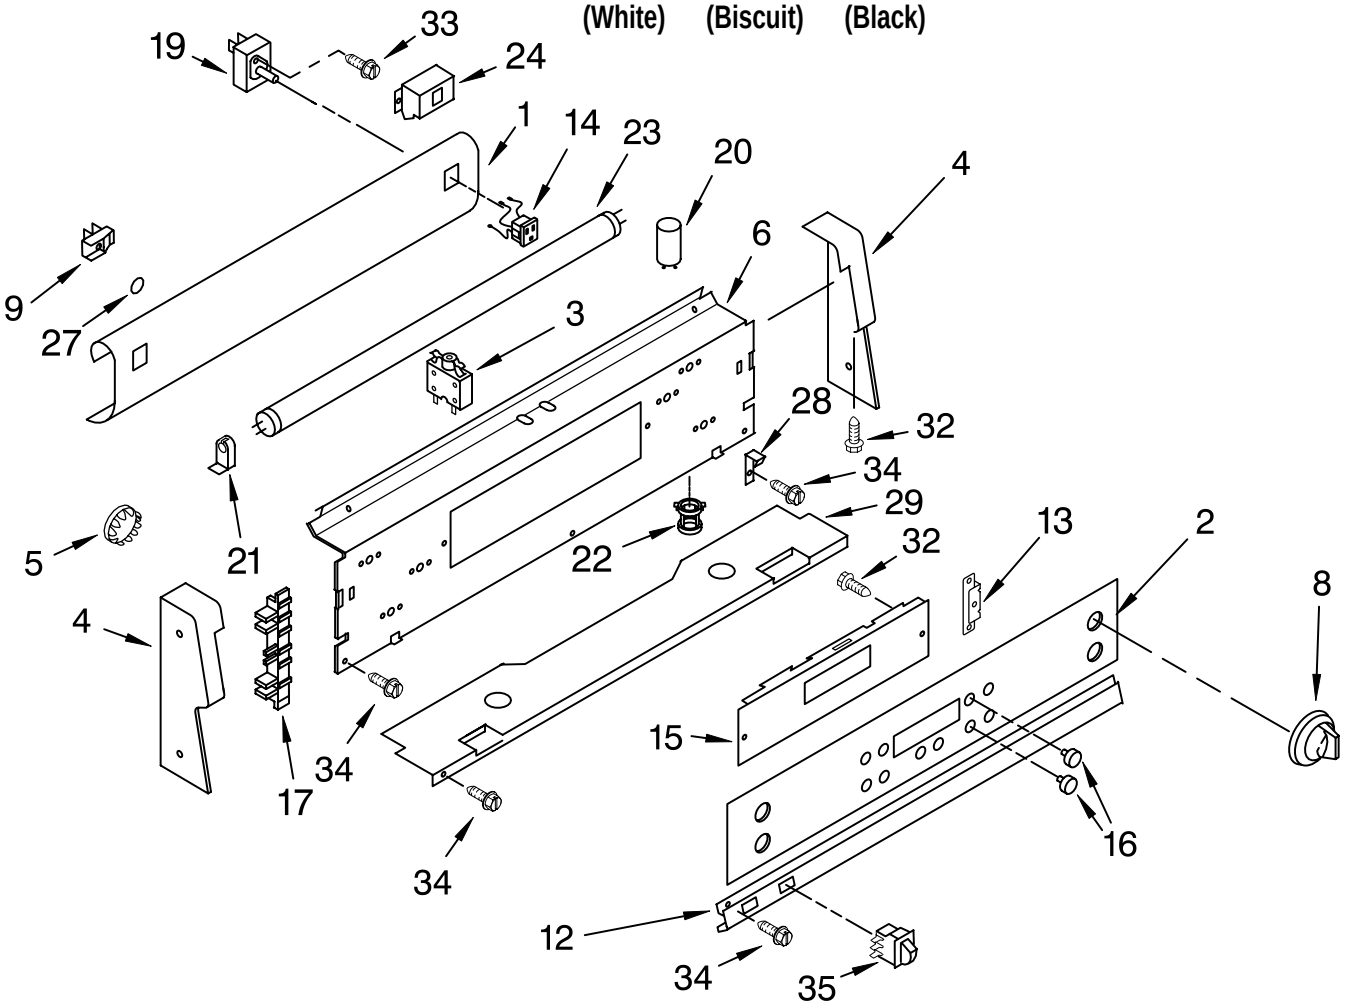


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Lamp Cover |
| | 9755481PW | White |
| | 9755481PC | Biscuit |
| | 9755481PB | Black |
| 2 | | Console−Glass |
| | 9754230 | White |
| | 9754232 | Biscuit |
| | 9755508 | Black |
| | | (Control Panel) |
| 3 | 3191072 | Breaker, 15Amp. (2) |
| 4 | | End Cap |
| | 9752422FW | White Left |
| | 9752423FW | White Right |
| | 9752422FC | Biscuit Left |
| | 9752423FC | Biscuit Right |
| | 9752422FB | Black Left |
| | 9752423FB | Black |
| 5 | 9780577 | Button, Plug (2) |
| 6 | 9755511 | Panel, Support |
| | 9752854 | Spacer |
| 8 | | Knobs, Control (4) |
| | 9752405FW | White |
| | 9752405FC | Biscuit |
| | 9752405FB | Black |
| 9 | 313102 | Light, Indicator (2) |
| | | (Burners) |
| 12 | | Trim Strip |
| | 9752441PW | White |
| | 9752441PC | Biscuit |
| | 9752441PB | Black |
| 13 | 9753304 | Bracket, Timer |
| 14 | | Outlet, Untimed (2) |
| | 9755406FW | White |
| | 9755406FC | Biscuit |
| | 9755406FB | Black |
| 15 | 9754114 | Timer |
| 16 | | Knob, Timer (23) |
| | 9781954FW | White |
| | 9781954FC | Biscuit |
| | 9781954FB | Black |
| 17 | | Insert, Plastic |
| | 9753076FW | White |
| | 9753076FC | Biscuit |
| | 9753076FB | Black |
| 19 | | Infinite Switch |
| | 9750643 | 1400W |
| | 9750644 | 1700W |
| | 9755174 | Dual, (2) |
| 20 | 9755493 | Starter, Light |
| 21 | 9755492 | Receptacle, Light |
| 22 | 9750866 | Starter, Holder |
| 23 | 9755491 | Light, Fluorescent |
| 24 | 9755353 | Box, Outlet |
| 27 | 9752589 | Lens, Indicator |
| 28 | 9753017 | Clip, Spring (2) |
| 29 | 9752439 | Base, Console |
| 32 | 9780265 | Screw |
| 33 | 3400816 | Screw |
| 34 | 3196168 | Screw |
| 35 | | Switch, Rocker |
| | | (Illuminated) |
| | 9754017FW | White |
| | 9754017FC | Biscuit |
| | 9754017FB | Black |
| | 9750995 | Insulation, Control Panel |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS

**For Model: GLP85800, GLP85200, GLP85900**
**(White) (Biscuit) (Black)**

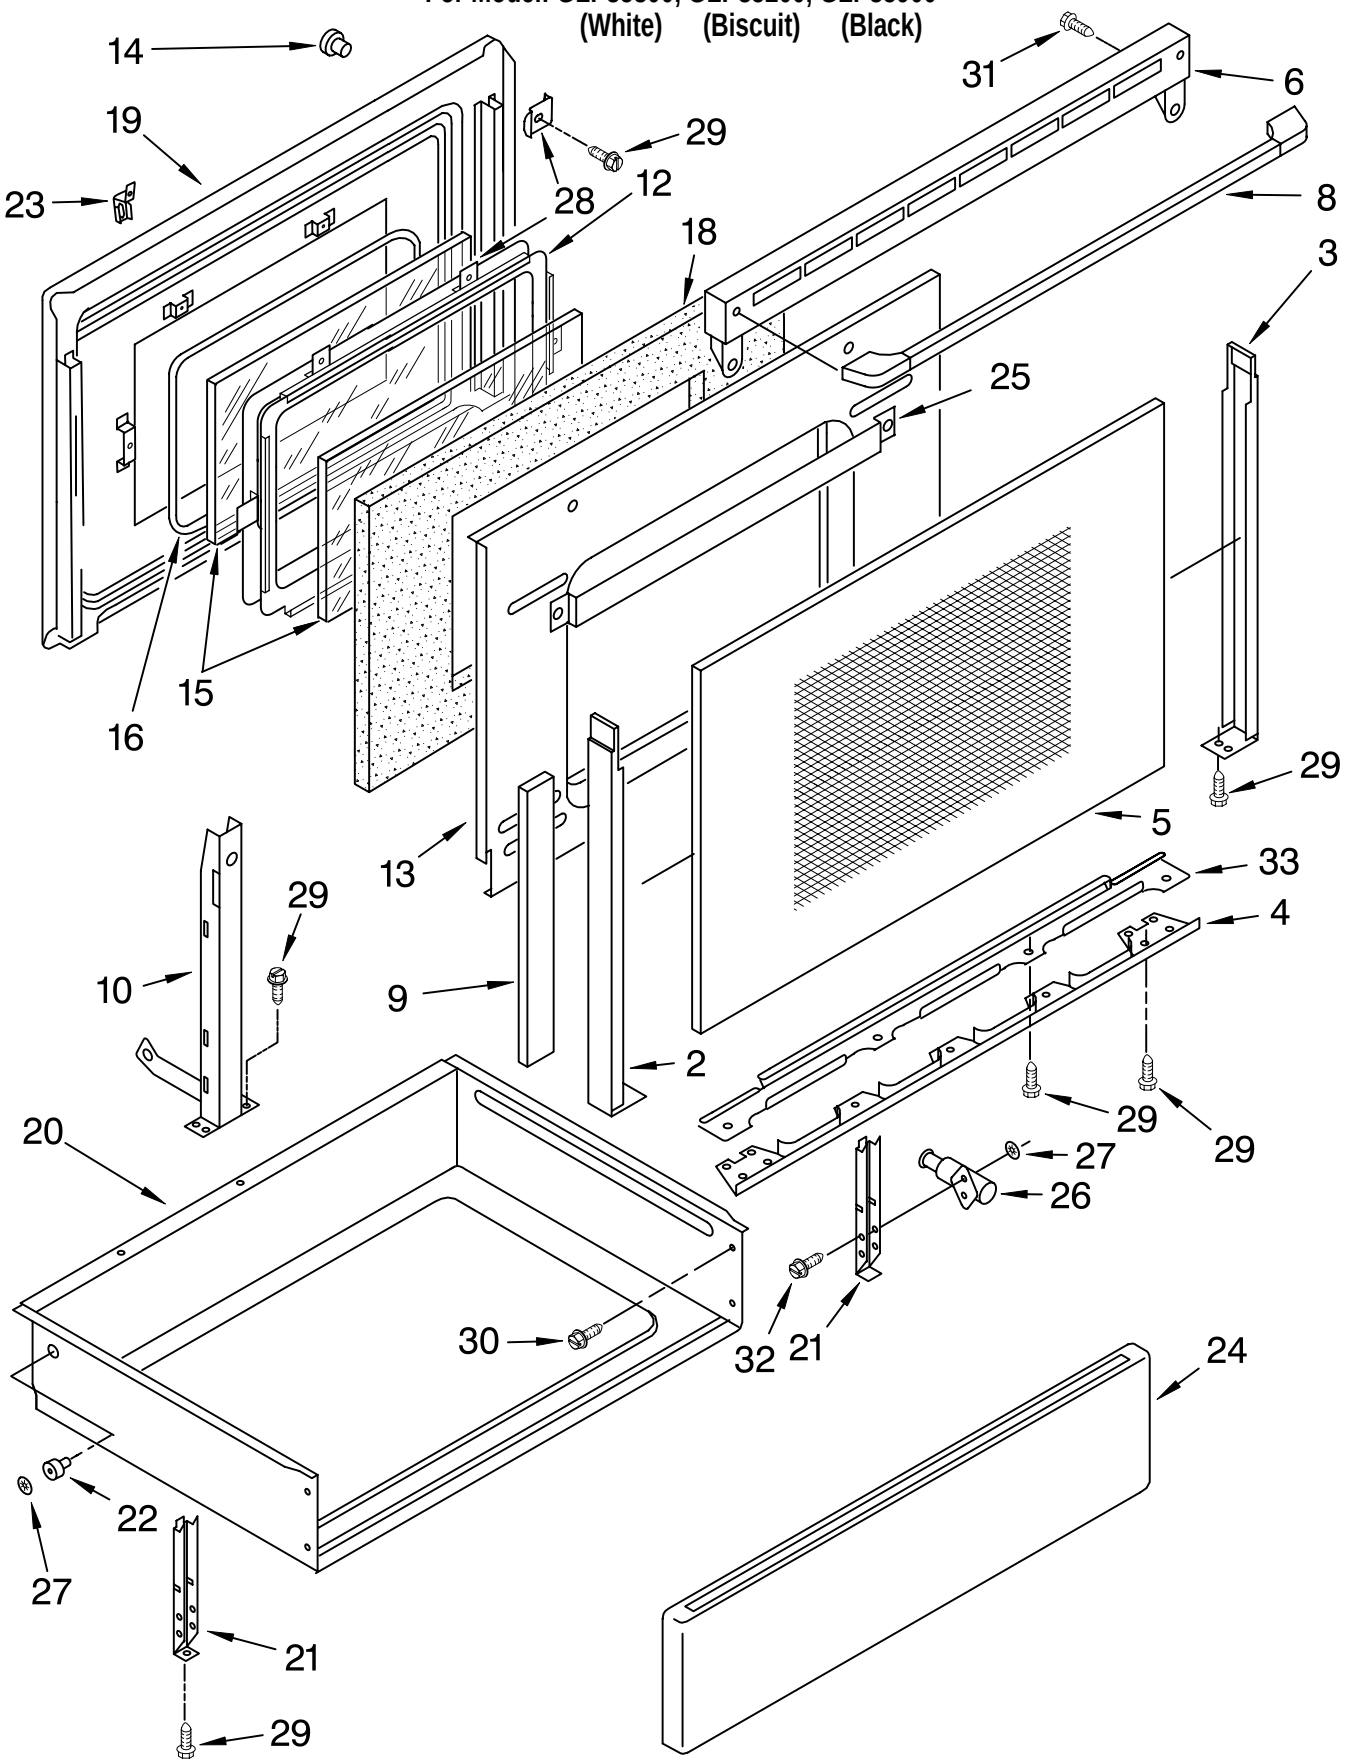


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS

**For Model: GLP85800, GLP85200, GLP85900**
**(White) (Biscuit) (Black)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 2 | | Trim, Door−Left |
| | 9782003PW | White |
| | 9782003PC | Biscuit |
| | 9782003PB | Black |
| 3 | | Trim, Door−Right |
| | 9782004PW | White |
| | 9782004PC | Biscuit |
| | 9782004PB | Black |
| 4 | | Trim, Door Bottom |
| | 9781209PW | White |
| | 9781209PC | Biscuit |
| | 9781209PB | Black |
| 5 | | Glass, Door Front |
| | 9781635PW | White |
| | 9781635PC | Biscuit |
| | 9781635PB | Black |
| 6 | | Vent, Door |
| | 9753498GW | White |
| | 9753498GC | Biscuit |
| | 9753498GB | Black |
| | 9781659 | Gasket, Door Vent |
| 8 | | Handle, Door |
| | 9755321FW | White |
| | 9755321FC | Biscuit |
| | 9755321FB | Black |
| 9 | 9781449 | Gasket, Door Glass |
| 10 | 9782033 | Hinge, Door R or L |
| 12 | 9781602 | Frame, Glass |
| 13 | 9781586 | Shield, Door |
| 14 | 9780771 | Bumper, Door |
| 15 | 9781593 | Glass, Pyro(2) |
| 16 | 9755177 | Seal, Window |
| 18 | 9754006 | Insulation, Door |
| 19 | 9781600GM | Liner, Door |
| 20 | 9750257 | Drawer & Roller |
| 21 | 9750169 | Bracket, Drawer |
| 22 | 422604 | Roller, Drawer |
| 23 | 9750676 | Retainer, Door |
| 24 | | Front, Drawer |
| | 9782108PW | White |
| | 9782108PC | Biscuit |
| | 9782108PB | Black |
| 25 | 9750693 | Heat Channel |
| 26 | 9751248 | Latch, Drawer |
| 27 | 90296 | Clip |
| 28 | 9781502 | Spacer, Door (8) |
| 29 | 9780265 | Screw |
| 30 | 9780272 | Screw |
| 31 | 9781072 | Screw |
| 32 | 9780806 | Screw |
| 33 | 9781771 | Deflector, Steam |

# OVEN CHASSIS PARTS

**For Model: GLP85800, GLP85200, GLP85900**

**(White) (Biscuit) (Black)**

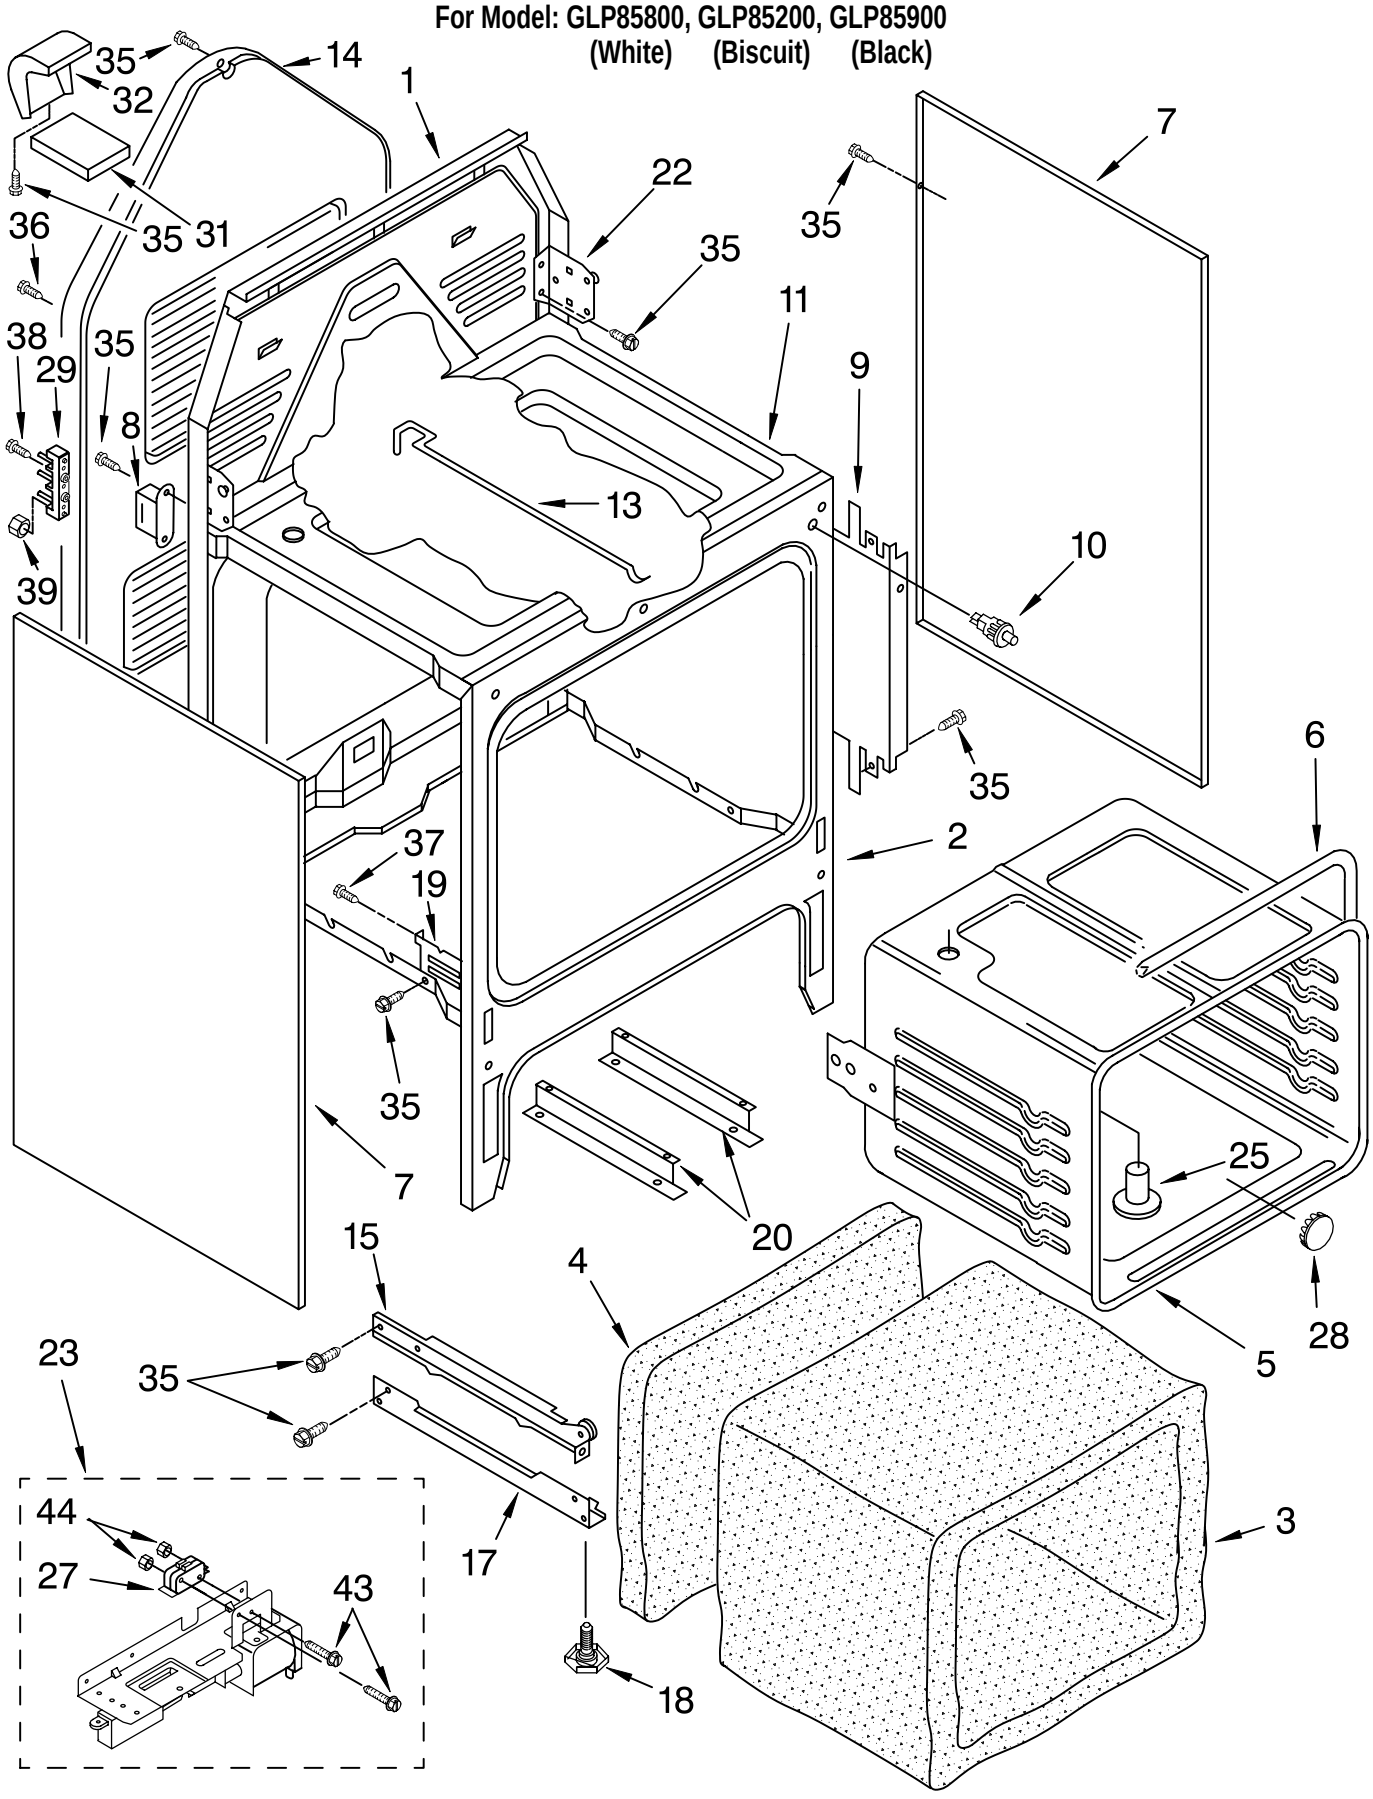


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN CHASSIS PARTS

**For Model: GLP85800, GLP85200, GLP85900**
**(White) (Biscuit) (Black)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9750146 | Main Chassis, Back |
| 2 | 9750514GM | Chassis, Front |
| 3 | 9754003 | Insulation, Wrap |
| 4 | 9754011 | Insulation, Rear |
| 5 | 9754113GM | Oven Liner |
| 6 | 9755179 | Gasket Oven |
| 7 | | Oven, Side Panel |
| | 9781907PW | White |
| | 9781907PC | Biscuit |
| | 9781907PB | Black |
| 8 | 9755437 | Ballast |
| 9 | 9780664 | Shield, Insulation |
| 10 | 9781580 | Door Switch (Oven Light) |
| 11 | 9750478 | Burner Box |
| 13 | 9750523 | Rod, Lock |
| 14 | 9750150 | Panel, Rear |
| 15 | | Rail, Drawer |
| | 9750223 | Left |
| | 9750224 | Right |
| 17 | 9750147 | Bottom Rail (2) |
| 18 | 312701 | Foot, (4) |
| 19 | 9782005 | Receiver, Hinge (R or L) |
| 20 | 9781904 | Supp Rail, Pan (2) |
| 22 | 9750258 | Hinge, Cktp.−Left |
| | 9750416 | Hinge, Cktp.−Right |
| 23 | 9782257 | Oven Lock Assembly |
| 25 | 9753091 | Vent Tube |
| 27 | 9782117 | Switch, Interlock |
| 28 | 9780578 | Plug, Button |
| 29 | 258076 | Block, Terminal |
| 31 | 9750393 | Cover, Vent |
| 32 | 9750394 | Cover, Back |
| 35 | 9780265 | Screw |
| 36 | 9780275 | Screw |
| 37 | 9780272 | Screw |
| 38 | 98884 | Screw |
| 39 | 112432 | Nut |
| 43 | 9750887 | Screw |
| 44 | 9750888 | Nut |
| | 9754253 | Insulation, Burner Box Rear |

# OVEN PARTS

**For Model: GLP85800, GLP85200, GLP85900**
**(White) (Biscuit) (Black)**

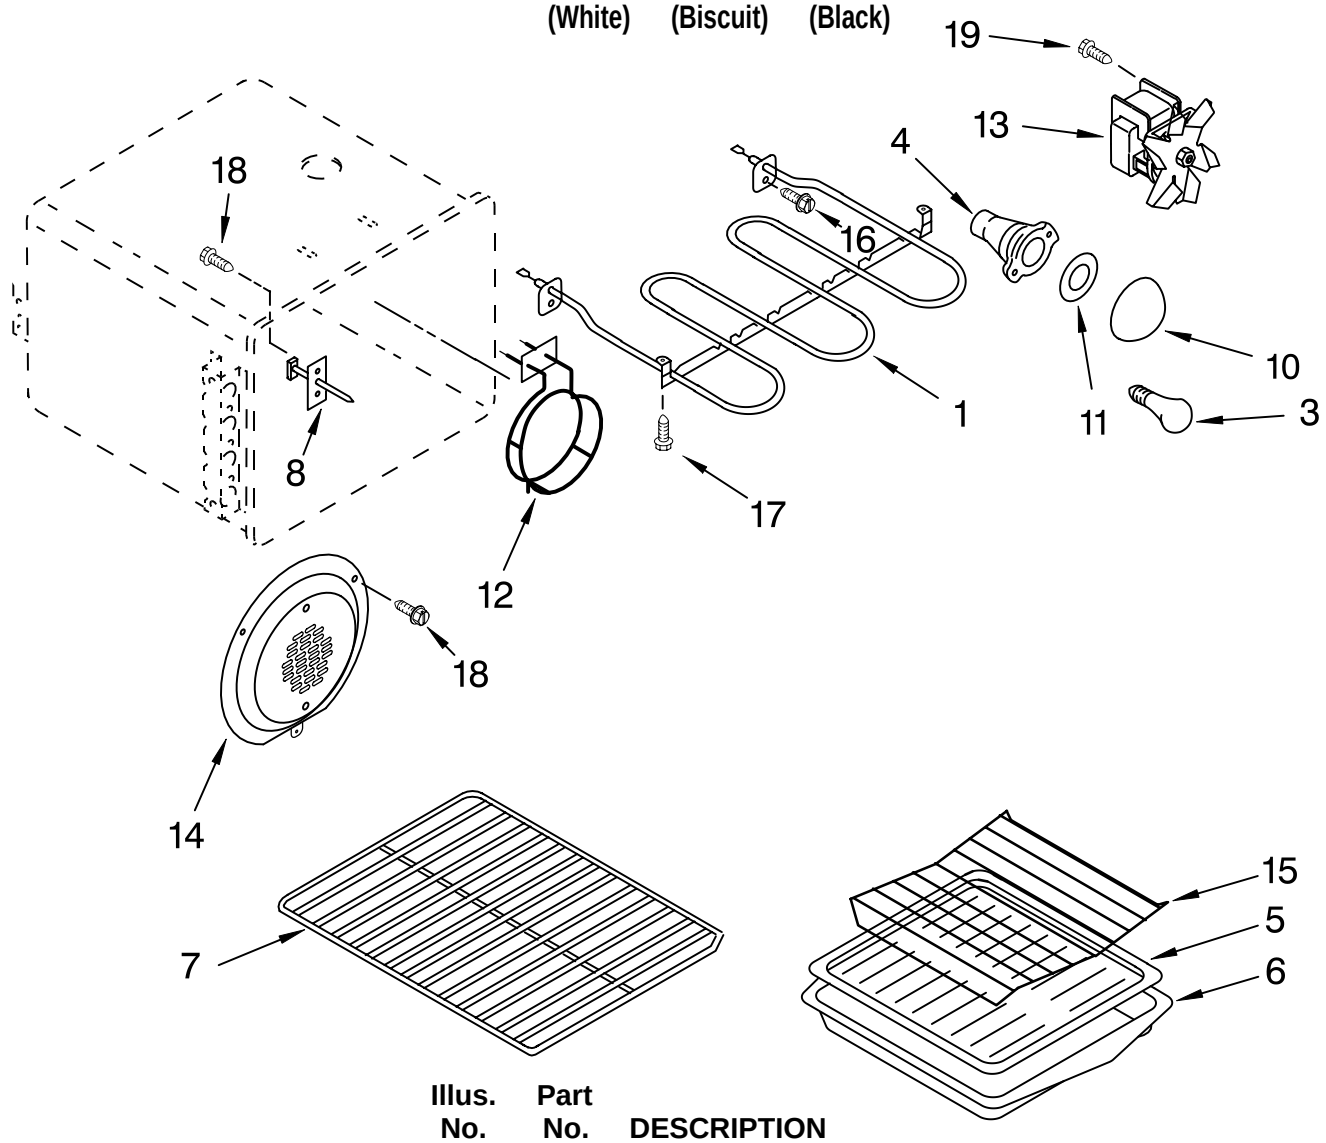


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9750211 | Element, Broil |
| 3 | 8935 | Bulb, Oven |
| 4 | 9781050 | Light Socket |
| 5 | 420104GM | Grill, Broiler |
| 6 | 420101GM | Pan, Broiler |
| 7 | 9750823 | Rack, Convection (3) |
| 8 | 9782081 | Sensor |
| 10 | 9781049 | Lens, Light |
| 11 | 3184533 | Gasket, Lens |
| 12 | 9751447 | Element, Convection |
| 13 | 9781543 | Fan,Convection (Assembly) |
| 14 | 9751904GM | Baffle,Convection |
| 15 | 9750827 | Rack, Roasting |
| 16 | 9781509 | Screw |
| 17 | 340184 | Screw |
| 18 | 9780265 | Screw |
| 19 | 9780272 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# HIDDEN BAKE PARTS

**For Model: GLP85800, GLP85200, GLP85900**
**(White) (Biscuit) (Black)**

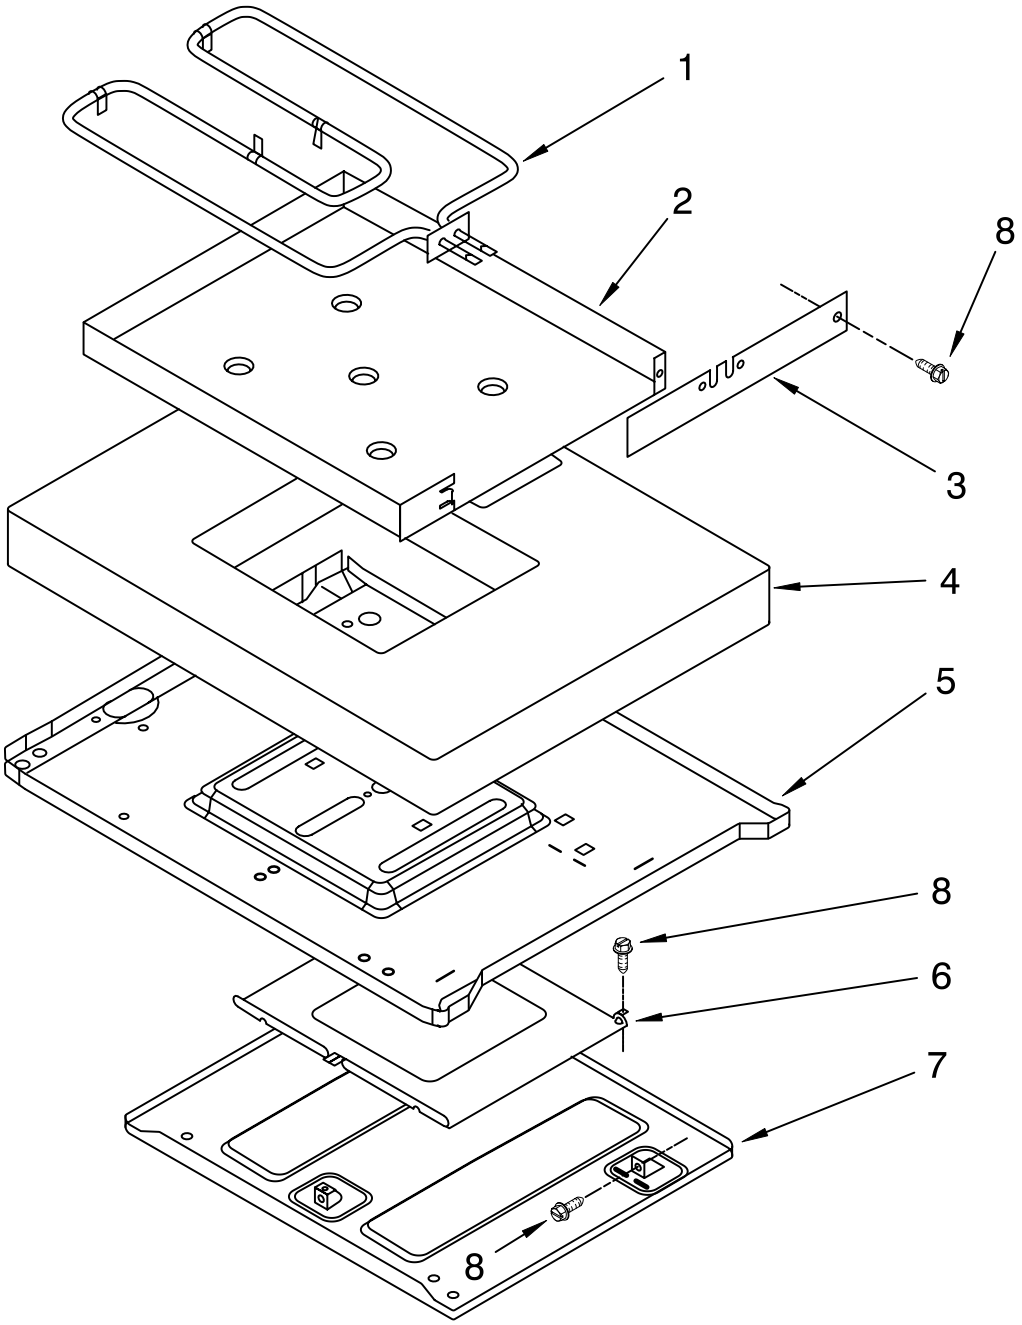


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9752294 | Element, Bake |
| 2 | 9782048 | Pan, Hidden Bake |
| 3 | 9782049 | Cover, Hidden Bake |
| 4 | 9754005 | Insulation |
| 5 | 9752735 | Retainer, Insulation |
| 6 | 9782050 | Plate, Reflector |
| 7 | 9782051 | Shield |
| 8 | 9780265 | Screw, 10−16 x 3/8 |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MISCELLANEOUS PARTS

**For Model: GLP85800, GLP85200, GLP85900**
**(White) (Biscuit) (Black)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|

### SPLICING WIRES−−25FT. LENGTH

| | |
|---|---|
| 242828 | Wire, Black 12 Ga. 150°c |
| 242820 | Wire, Black 14 Ga. 150°c |
| 242821 | Wire, Blue 14 Ga. 150°c |
| 242822 | Wire, Brown 14 Ga. 150°c |
| 242830 | Wire, Brown 14 Ga. 200°c |
| 242823 | Wire, Green 14 Ga. 150°c |
| 242824 | Wire, Orange 14 Ga. 150°c |
| 242829 | Wire, Red 12 Ga. 150°c |
| 242825 | Wire, Red 14 Ga. 150°c |
| 242831 | Wire, Red 14 Ga. 200°c |
| 242826 | Wire, White 14 Ga. 150°c |
| 242827 | Wire, Yellow 14 Ga. 150°c |
| 242832 | Wire, Yellow 14 Ga. 200°c |

### PAINT, TOUCH−UP (1/2oz.)

| | |
|---|---|
| 72017 | White |
| 72107 | Almond |
| 511873 | White Porcelain (2 Oz.) |

### PAINT, PRESSURIZED SPRAY (12 oz.)

| | |
|---|---|
| 350930 | White |
| 350956 | Almond |
| 285006 | Superior Black |
| 206922 | Primer (White) |

### PAINT, BULK (1 qt.)

| | |
|---|---|
| 799344 | White (Uncut) |
| 978883 | Almond (Uncut) |

### REFINISHING MATERIAL

| | |
|---|---|
| 799832 | Kit, Porcelain Repair (White) |
| 242756 | Touch−Up Self−Clean (1/2 Pt.) |
| 261582 | Grease |
| 814009 | Glass Cleaner |
| 9780196 | Cleaning Cream |

### INSULATION

| | |
|---|---|
| 261514 | Insulation, Fiberglass (1−1/2" x 24" x 120") |
| 240132 | Insulation, Fiberglass (2−1/2" x 22" x 120") |
| 241430 | Foil, Aluminum Oven (18" x 25') |

### WIRING HARNESS PARTS

| | |
|---|---|
| 9782121 | Harness, Wire (Main) |
| 9782139 | Harness, Wire (Cooktop, Controls) |
| 9753682 | Harness, Wire (Cooktop) |
| 9755472 | Harness, Wire (Top Light) |
| 9750744 | Harness, Wire Door Switch |
| 9753683 | Harness, Wire (Hidden Bake) |
| 9754100 | Harness, Wire (Bridge Element) |
| 9753680 | Harness, Wire (Warm Zone) |
| 9753374 | Harness, Wire (Dual Oven Light) |
| 9755404 | Power Cord |
| 690989 | Screw, Grounding |
| 9755473 | Harness, Outlet (2) |
| 20082084 | Tie, Wire |
| 9782182 | Jumper, Wire (Dual Switch) |
| 9781542 | Harness,Wire (Jumper Convec.) |

### ANTI−TIP KIT

| | |
|---|---|
| 9752848 | Anit−Tip Kit |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST